



**Applies to the following models:**

Golvo 7000 ES	Prod. No. 2000009
Golvo 7007 ES	Prod. No. 2000010
Golvo 7007 LowBase™	Prod. No. 2000061

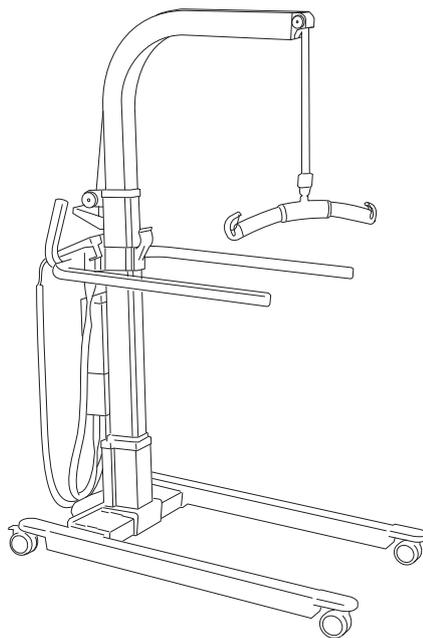

Golvo 7000 ES/7007 ES

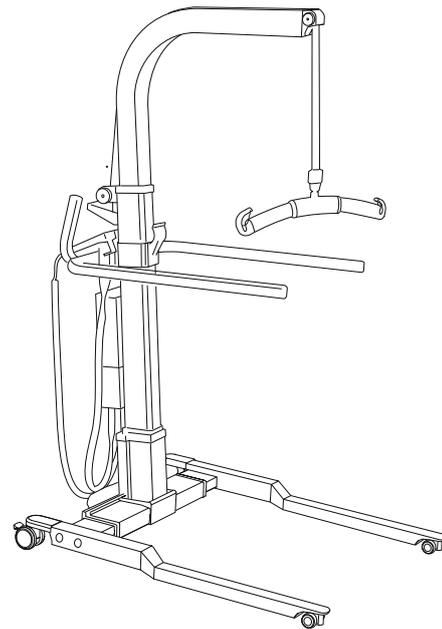

Golvo 7007 LowBase™

## Product Description

Golvo is an electrically powered mobile lift, i.e., both raising and lowering of the lift arm and width adjustment of the base are done with electric motors.

To ensure maximum safety for caregivers and patients, Golvo is equipped for both mechanical and electrical emergency lowering. All Golvo lifts are equipped with convenient armrests, to assist both the caregiver and the patient. If needed, the armrests can be folded down into a support position.

Golvo is also available in a design with an extra low base; Golvo LowBase™. This model is recommended

for lifting to and from beds/barrack-beds that have a ground clearance of 58-110 mm (2.3-4.3 inch.).

Golvo can be used in most lifting situations: for example, between bed/wheelchair, to/from the toilet, in bath and shower, to/from the floor, for weighing patients and for horizontal lifting.

A comprehensive range of accessories are available for Golvo. Individual fitting of the sling and other lifting accessories is of utmost importance for function and safety when using the lift.

*In this document, the person being lifted is called the "patient" and the person helping is called the "caregiver".*

**△ are triangles used to warn of situations that demand extra care and attention.**

** IMPORTANT!**

Carefully read these instructions and the instructions for the particular lifting accessory being used. Lifting and transferring patients always presents a potential risk. It is essential to thoroughly understand the content of these manuals, and that only trained persons use the equipment. If you have questions, please contact your Liko/Hill-rom representative.

# Table of Contents

Safety Instructions .....	2
Definitions.....	3
Technical Data .....	3
Measurements.....	4
Assembly.....	5
Disassembly .....	7
Operation.....	8
Charging the Batteries.....	11
Maximum Load.....	12
Recommended Lifting Accessories .....	12
Simple Troubleshooting.....	15
Care and Maintenance .....	16

**△ NOTE!** This instruction guide contains information that is important for users of the product. A complete understanding of the contents of the instruction guide is essential, and only personnel who are well informed should use the equipment. Remember to keep the instruction guide readily accessible for users of the product.

## Safety Instructions

**Before using the lift for the first time, make certain that:**

- the lift is assembled according to the instructions;
- the lifting equipment is correctly applied to the lift;
- the batteries have been charged for at least 6 hours;
- you have read the instruction guides for the lift and lifting accessories;
- personnel using the equipment have received appropriate instructions and training.

**Before lifting always make certain that:**

- the lift strap is not twisted or worn and that it can move freely in and out of the lift unit;
- the lifting accessories is selected appropriately in terms of type, size, material and design with regard to the patient's needs;
- lifting accessories are not damaged;
- the lifting accessory is correctly applied to the lifting equipment;
- the lifting accessory is correctly and securely applied to the patient, so that no personal injury can occur;
- the sling's strap loops are correctly fastened to the slingbar hooks when the sling strap is extended, but before the patient is lifted from the underlying surface.

**△ Never leave a patient unattended in a lifting situation!**



Golvo 7000 ES/7007 ES/7007 LowBase are tested by an accredited testing institute.

Golvo 7000 ES/7007 ES/7007 LowBase comply with the requirements according to IEC 60601-1, IEC 60601-1-2, EN ISO 10535, UL-60601-1 and CAN/CSA C22.2 No. 606.1.


Particular care must be taken when using strong sources of electromagnetic interference, such as diathermy, etc, so that cables are not positioned on or near the lift. If you have questions, please consult the responsible assistive-device technician or the supplier.

This equipment is not suitable for use in the presence of flammable mixtures.

**Maximum load: 200 kg (440 lbs.)**


## Definitions

**Golvo 7000 ES/7007 ES**

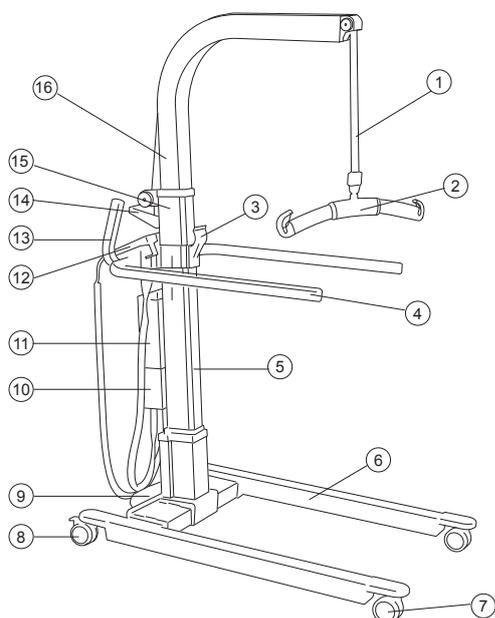

1. Lift strap
2. Sling bar with latches
3. Parking bracket for sling bar
4. Foldable armrest
5. Mast with built-in motor for lifting
6. Base
7. Front wheel
8. Rear wheel with brake
9. Motor for base-width adjustment

**Golvo 7007 LowBase™**

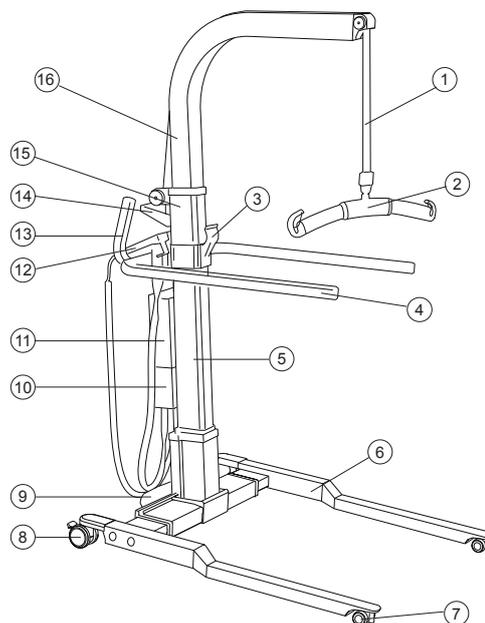

10. Control box with emergency stop, built-in charger and electrical emergency lowering/raising
11. Battery box
12. Hand control
13. Manoeuvring handles
14. Emergency lowering (mechanical)
15. Product decal
16. Lift arm

## Technical Data

**Lifting speed:** Two speed levels: 4.8 cm/s (1.9 inch./s) and 3.2 cm/s (1.3 inch./s); both speed levels without load.

**Batteries:** Two 2.9 Ah, 12 V, valve-regulated lead-acid gel type batteries. New batteries are available from supplier.

**Battery charger:** Built-in charger for 100-240 V AC, 50-60 Hz, max 400 mA.

**Lift motor:** 24 V, 6.5 A. Manufactured by Liko with planetary gearing and safety nut (prevents excessive wear).

**Motor for width adjustment:** 24 V, 3.5 A. Geared motor.

**Wheels:** Standard front: 75 mm / 3.0 inch. twin wheels.  
Standard rear: 75 mm / 3.0 inch. lockable twinwheels.  
Golvo LowBase front: 46 mm/1.8 inch.  
Golvo LowBase rear: 75 mm/ 3.0 inch. lockable twinwheels.

**Material:** Anodized aluminium.

**Emergency lowering:** Mechanical and electrical.

**Intermittent operation:** Int. Op 10/90, active operation max 2 min. Out of a time of 100, active must be less than 10, however not more than 2 min.

**Degree of protection:** IP 43

**Sound level:** 53 dB

 This device is built for indoor operation.


 Type B according to the degree of protection against electric shock.

 Class II equipment.


**Patented**

# Measurements

## Golvo 7000 ES/7007 ES

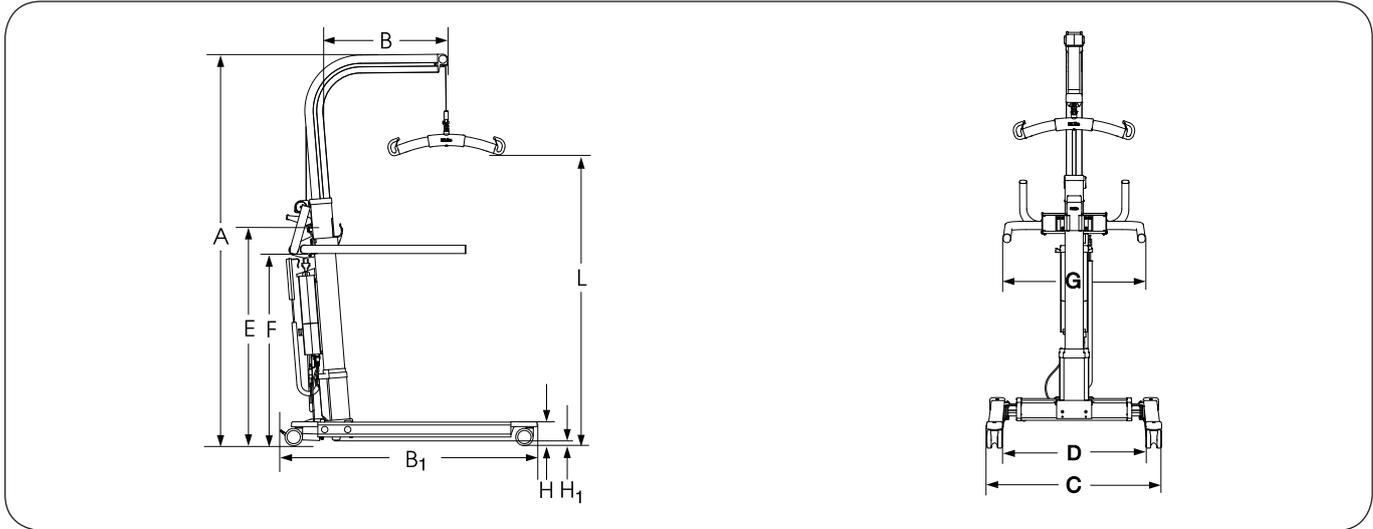

## Golvo 7007 LowBase™

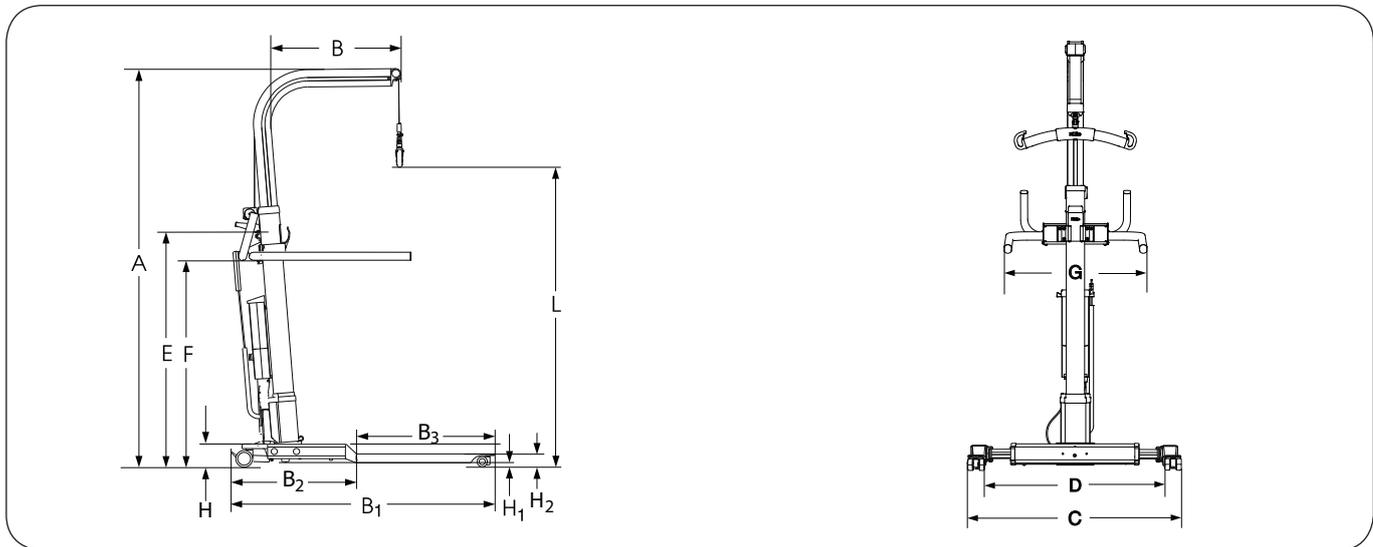

### Maximum load and weight in kg. Measurement in mm.

Model	Wheel diameter	L Max	A Max	A Min	B	B <sup>1</sup>	B <sup>2</sup>	B <sup>3</sup>	C	D	E	F	G	H	H <sub>1</sub>	H <sub>2</sub>	Weight	Turning diameter
Golvo 7000 ES	75/75	1750	1990	1340	540	1120	-	-	670-950	530-810	960	840	600	110	23	-	42	1240
Golvo 7007 ES	75/75	1850	2080	1440	580	1190	-	-	750-1020	620-900	1060	940	600	110	23	-	44	1330
Golvo 7007 LowBase™	46/75	1850	2080	1440	580	1190	590	600	750-1020	620-900	1060	940	600	110	20	60	46	1330

Lifting range (1260 mm) is adjustable. See page 9.

### Maximum load and weight in lbs. Measurement in inches.

Model	Wheel-diameter	L Max	A Max	A Min	B	B <sub>1</sub>	B <sub>2</sub>	B <sub>3</sub>	C	D	E	F	G	H	H <sub>1</sub>	H <sub>2</sub>	Weight	Turning diameter
Golvo 7000 ES	2.96/2.96	69	78	53	21	44	-	-	26-38	21-32	38	33	24	4.3	1	-	93	49
Golvo 7007 ES	2.96/2.96	73	82	57	23	47	-	-	30-40	24-35	42	37	24	4.3	1	-	97	52
Golvo 7007 LowBase™	1.8/2.96	73	82	57	23	47	23.2	23.6	30-40	24-35	42	37	24	4.3	0.8	2.4	101	52


Lifting range (49.6 inches) is adjustable. See page 9.

# Assembly

**Before assembly, make sure you have the following parts and tools:**

- mast with lift arm, motor for lift arm, control box and sling bar with bolt and locking nut (M8)
- armrest
- base including motor for base width adjustment
- battery box, including holder for charger cable
- hand control with cable
- bag containing instruction guide, tag marked "Emergency lowering", charger cable and extension cable
- two M6 screws
- tools: Wrench: 17 mm  
Allen wrench: 4, 5 and 6 mm

**△ Lock the wheels before you begin assembling the lift.**

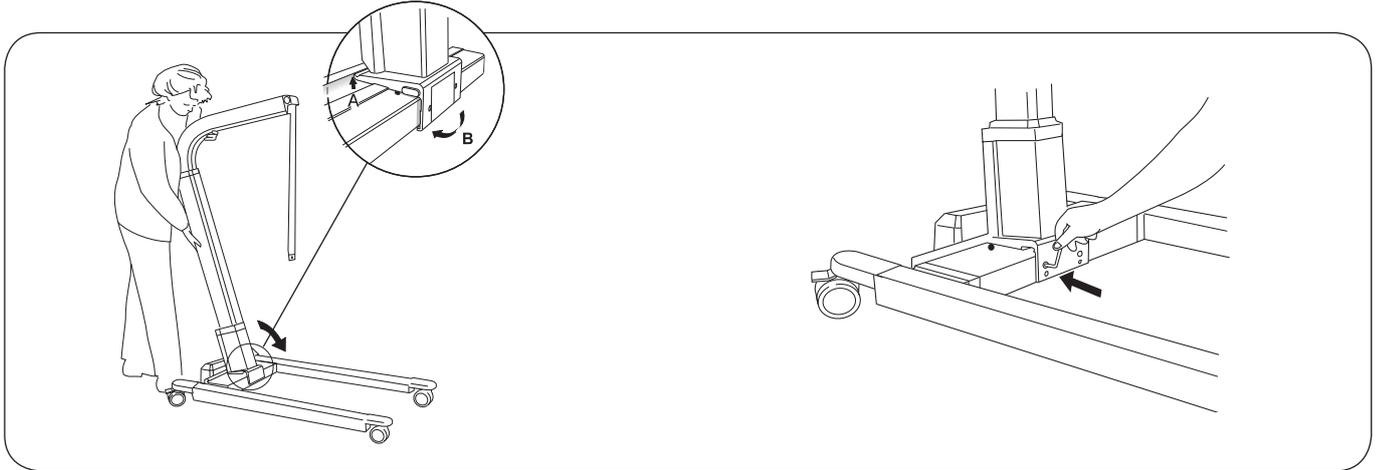


1. Start by unscrewing the transport safety plate (metal plate) at the lower edge of the mast. Then throw away the safety plate, the screws and the red information sticker attached to the safety plate.

A) Place the mast on the center beam of the base, between the two black plastic caps.

B) Push the mast forward as shown in the illustration above until it snaps onto the center beam.

2. Secure the mast with two M6 screws (enclosed) in the upper holes on the mast.


**NOTE! Do not place any screws in the lower holes!**

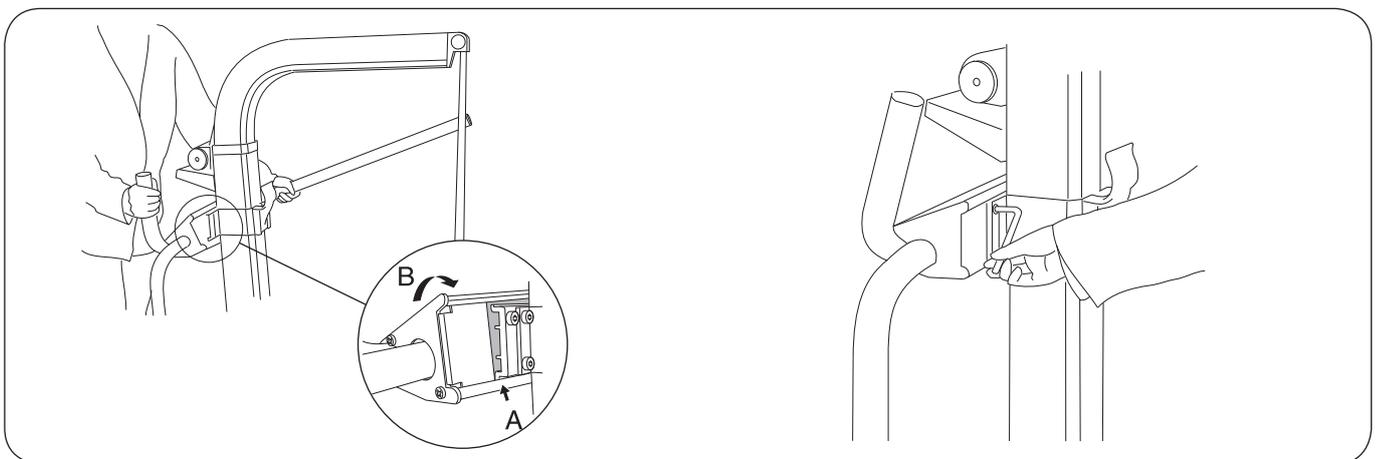

3. A) Place the armrest unit in the bracket on the mast, inserting it into the lower track first.


B) Lower the armrest unit, pressing on it until it snaps onto the upper track. Note that none of the pre-mounted M8 screws should be completely unscrewed, although you may need to loosen some of them.

4. Secure the armrest by tightening the two pre-mounted M8 screws.

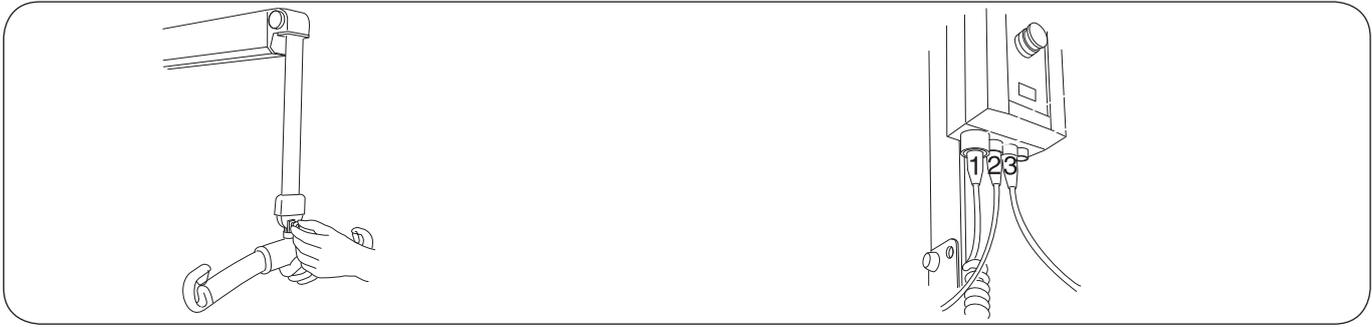


5. Assemble the sling bar (or other accessory) using M8 screws and locking nut (enclosed). Make certain to turn the screws 2 mm (0.1 inch.) past the lock function on the nut. Do not tighten so much that the sling bar connector cannot move in relation to the locking plate.

6. Connect the cables to the control box as follows:  
 - Cable for hand control to socket number 1.  
 - Cable for lift motor to socket number 2.  
 - Cable for base motor to socket number 3.

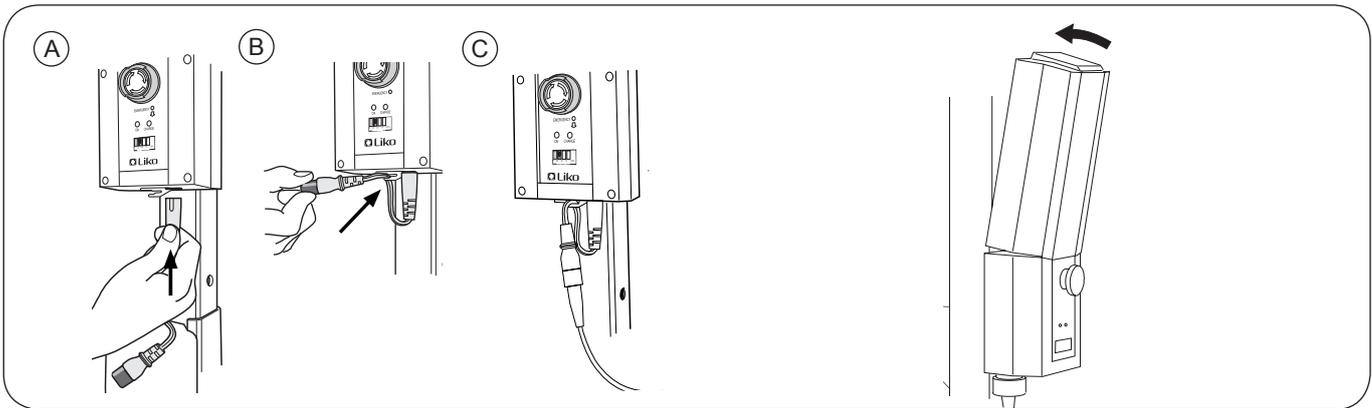

7. A) Connect the extension cable for the charger cable to the control box.  
 B) Insert it in the tension clip on the underside of the control box.  
 C) Finally, connect the charger cable to the extension cable.

8. Place the battery in its holder above the control box. Check that the battery locks into the holder (audible click).

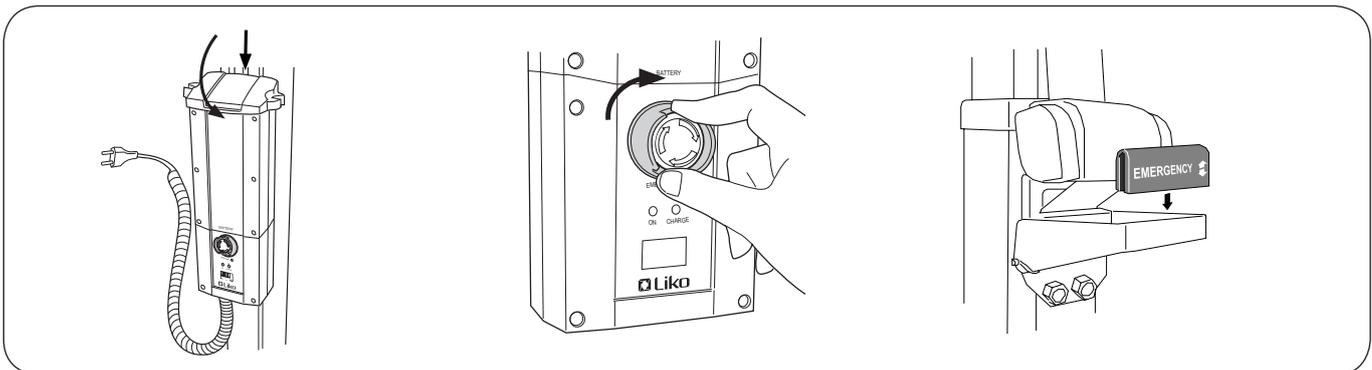

9. Mount the holder for the charger cable. Hook it on the outer edge and press down until you hear a 'click'.

10. Reset the emergency stop by turning the button in the direction indicated by the arrows.

11. Press the tag marked "Emergency" securely into place on the emergency lowering device.

**After assembly, check to ensure that:**

- the lifting motions correspond with the buttons on the handcontrol
- the emergency lowering works properly (mechanical and electrical)
- wheel brakes work properly
- the width adjustment of the base works properly
- the indicator lamps on the front of the control box light during charging.

# Disassembly

1. Start by loosening the sling bar or other accessory mounted on the lift.

2. Loosen the armrest holder as described below:




A. Loosen both of the M8 screws on each side of the mast.

B. Remove the armrest holder by using two screwdrivers.

3. Release cables for the hand control, the lift motor and the motor for base adjustment.

4. Remove the mast:

**△ When the mast is free from the base it must be supported so it does not fall.**

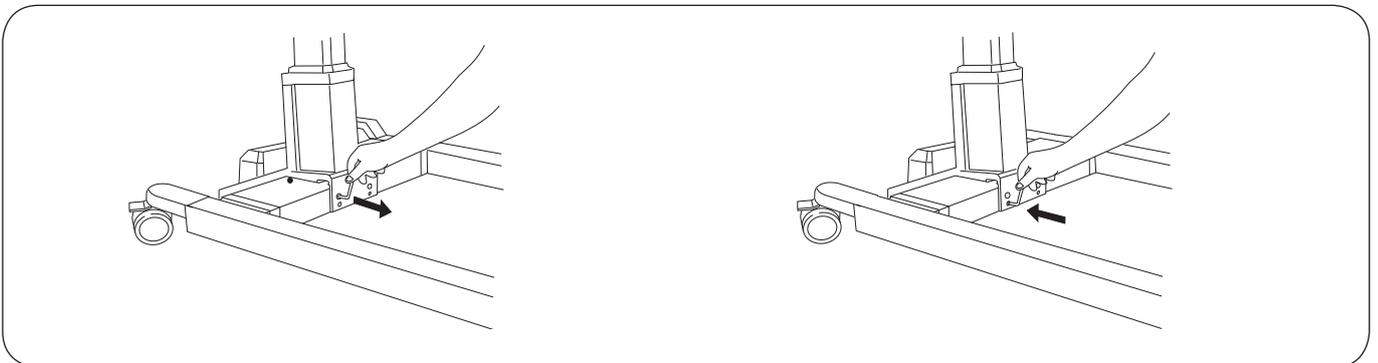

A. Remove both of the safety screws from the upper holes on the mast.

B. Screw in the safety screws in the lower holes on the mast. This releases the mast from the base and it can now be taken down.

# Operation

## Operation

Operate the lift using the pushbuttons on the hand control. For raising and lowering, press either of the two upper pushbuttons. The direction in which the arrows are pointing applies when the hand control is held as shown in the illustration. The thicker sets of arrows refer to the maximum lifting speed. The thinner arrows refer to the lower lifting speed. The lifting motion ends as soon as the push button is released.

For base-width adjustment, press either of the two lower push-buttons:

-  Wider
-  Narrower.

## Emergency stop

### To activate

Press in the red button on the control box.

### To reset

Turn the button in the direction of the arrows.

## Electrical emergency lowering/raising

For electrical emergency lowering/raising, use a thin object and press into the hole marked "Emergency" on the control box.

**⚠ The object used to press must not be too sharp since this might cause damage to the control box!**

## Mechanical emergency lowering

- Emergency lowering should always take place over a bed, wheelchair, or other appropriate place.
- To operate, pull down the handle marked "Emergency Lowering" and then release the handle upward. Continue pumping the handle until the patient in the lift is on a stable surface. Press down on the sling bar and continue to pump the handle down and up until the sling bar is low enough to permit the sling's strap loops to be unhooked.


## Locking the wheels


The rear wheels can be locked for rotation and lateral movement. To lock the wheels, press down the brake lever with your foot. To release the brakes, press up the brake lever with your foot.

During lifting, wheels should remain unlocked so that the lift may shift to the patient's center of gravity. The wheels should, however, be locked if there is a risk for the lift moving into the patient, for example when lifting from the floor.

**⚠ Locked wheels during lifting increases the risk of the lift tilting over.**

**⚠ CAUTION! Due to the risk for injury, never use your hands to lock the foot brake!**

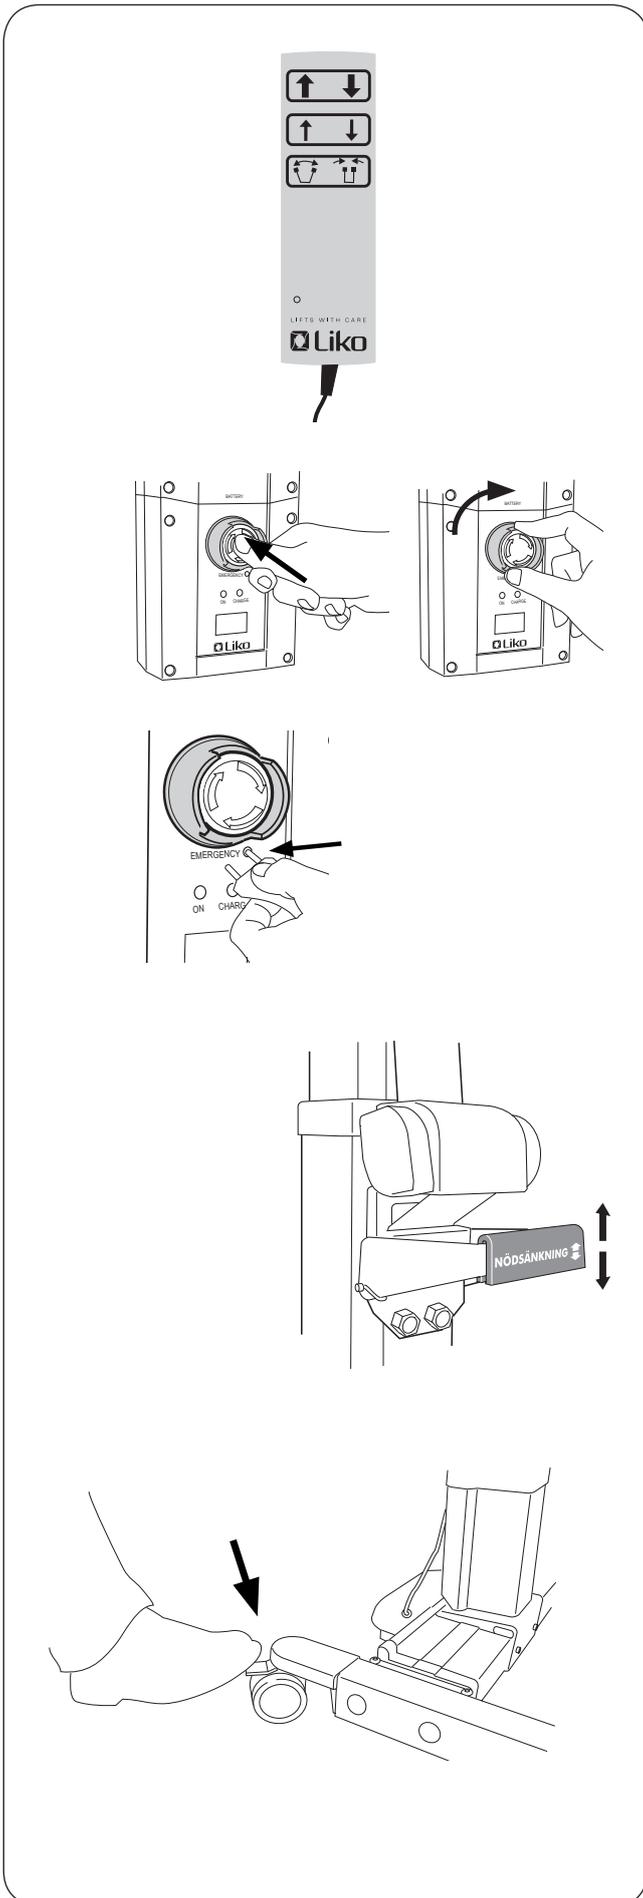


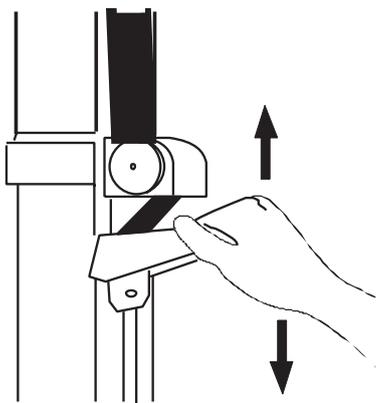

### Setting the lifting range

If you need to move the sling bar closer to the floor, you can do this by using the mechanical lowering device to extend the lift strap. Do not extend the lift strap more than necessary since this also influences the maximum lifting height. For example, when lifting a patient from the floor it may be necessary to lower the lifting range if the sling's strap loops do not reach the hooks of the sling bar even when the lift arm is in its lowest position.

**Do the following:** Hold down the red emergency lowering handle while simultaneously pulling down the sling bar with the other hand. This extends the lift strap and lowers the sling bar. Continue until you achieve the needed length.

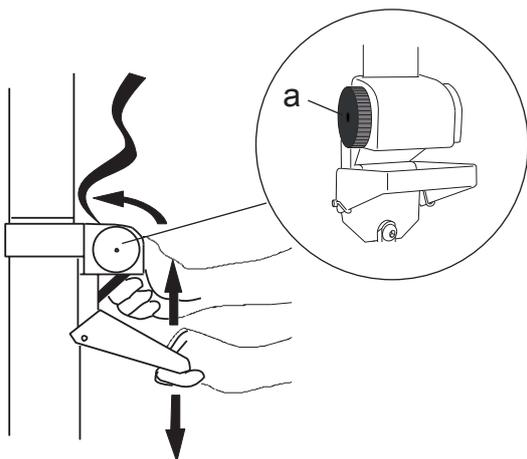


### After mechanical lowering / Resetting the lifting range

If you extend the lift strap while testing/using the emergency lowering function, the height of the lifting range is lowered. To reset the maximum lifting height, you must re-establish the original length of the lift strap.

#### Do the following:


1. Unweight the lift strap above the emergency lowering device by placing the sling bar on the lift mast or by having another person holding up the sling bar to keep the lift strap slack.
2. Move the emergency lowering handle down and up with one hand, while turning the black knob clockwise (tightening the lift strap) with your other hand. Repeat the action until the red mark on the lift strap is slightly above the emergency lowering device.

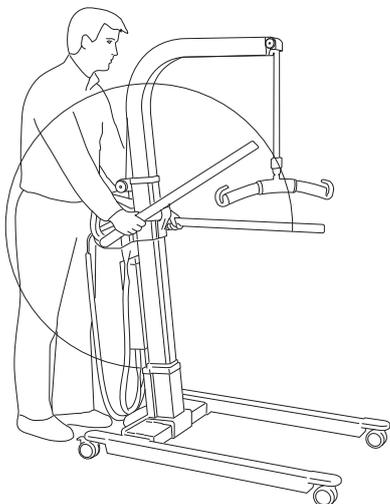

### Armrest

If needed, the armrests can be folded down into a support position. The armrests have two functions: to give the patient a greater sense of security and to make it easier for the caregiver to move the lift.

**△ CAUTION! When moving a patient in the lift between different rooms, the armrests should be placed in the support position!**

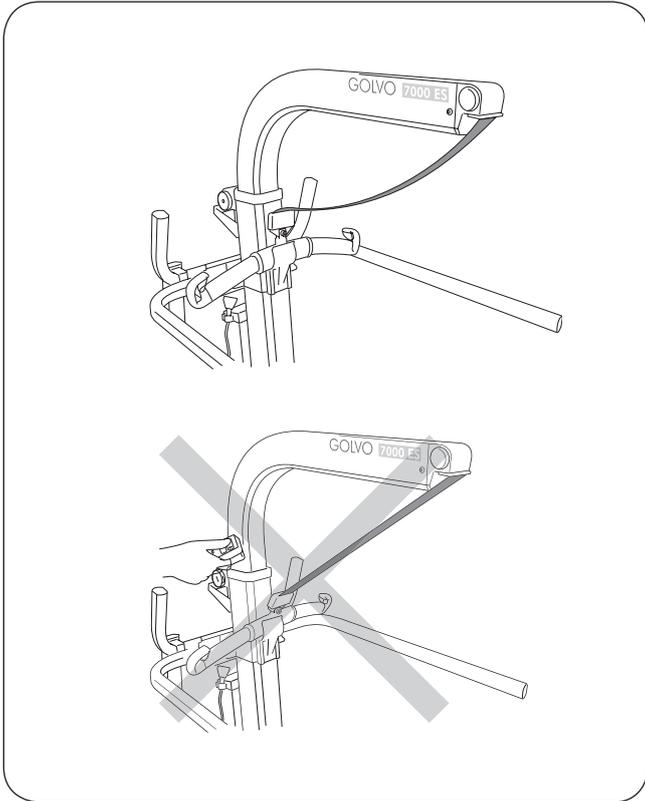

### Parking the sling bar

When the lift is not being used, or when moving an empty lift, the sling bar can be placed in the parking bracket.


The parking bracket is intended for use with Universal SlingBar 350, 450 and 600 (all models).

### ⚠ Important when using the parking position:

Never raise the lift arm while the sling bar is parked in the parking bracket since this might cause personal injury or damage on the lift if the sling bar suddenly releases from the hook and swings forward.

### Avoid unbalanced lifting

Always make certain that the lift strap is vertical and parallel to the mast. To achieve this, Golvo should be placed correctly under the bed. Adjust the width and/or change the position of Golvo in relation to the base of the bed to achieve the correct position.

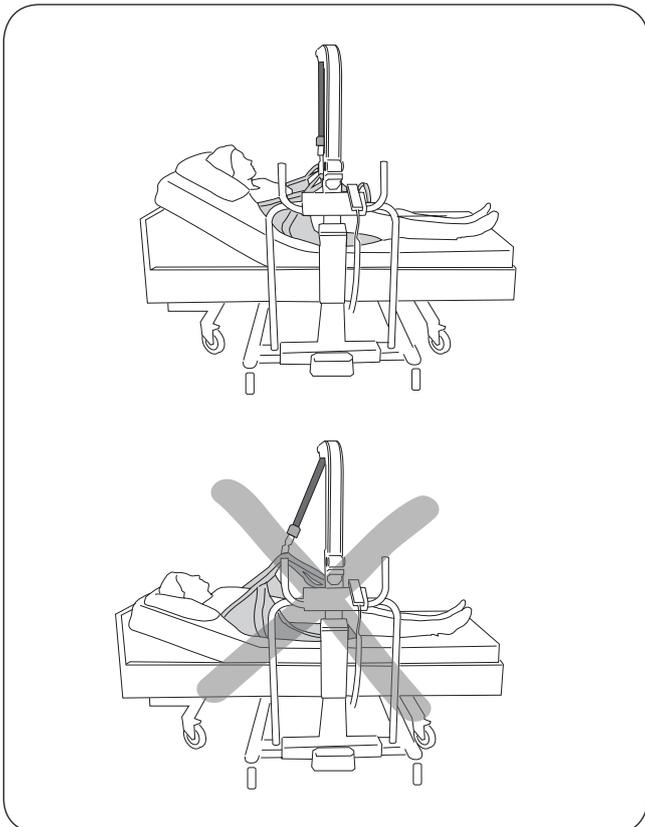

Check that the lift strap is vertical during the lift.

Do not start the lift unless the sling bar is well balanced. An unbalanced load leads to wear and tear on the lift strap. It may also cause instability of the lift during the lift motion.

**⚠ An unbalanced load increases the risk of the lift tilting over!**

# Charging the batteries

For maximum battery life, batteries must be charged regularly. We recommend charging after use or each night. Maximum charge is reached after about 6 hours. When the batteries are fully charged, the charger disconnects automatically. **NOTE! A yellow indicator lamp on the control unit lights constantly during charging. When the batteries are fully charged, the yellow lamp shuts off. If this lamp continues to light after 8 hours, the batteries probably need to be replaced. Discontinue charging and replace batteries.**


## Never charge batteries in a wet area!

If the lift is not in daily use, we recommend that the emergency stop be pressed in after the lift has been used. This breaks the current and conserves battery power. Make sure the lift is fully charged before pressing in the emergency stop.


## Battery capacity

If the battery needs charging, a beep tone will sound and a lamp (A) is lit on the handcontrol. There is, however, enough power left in the battery for a few more lifts.

A display on the control box shows the current battery capacity. When all fields of the display are black, the battery is fully charged. When a plug symbol appears (see illustration), the battery must be re-charged immediately.

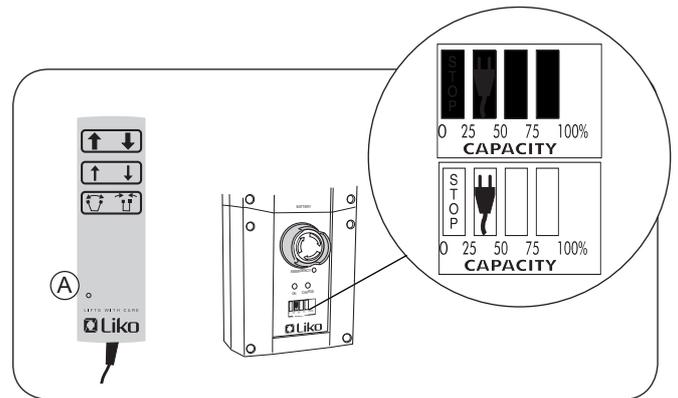

## Alternative charging procedures

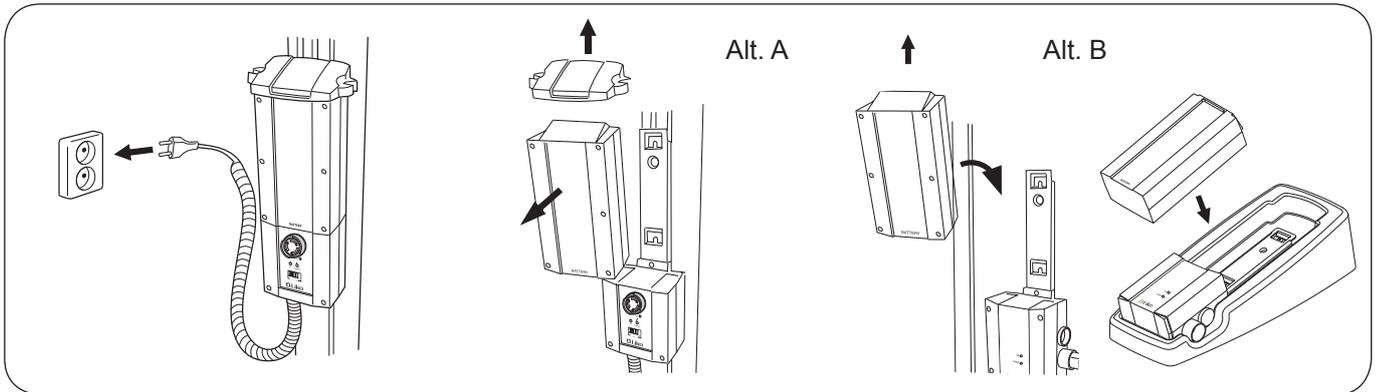

### With built-in charger:

Plug the charger cable into a power socket (100-240 V AC). Check that the yellow lamp on the control box lights (indicates charging).

If the charger cable is stretched out it should be replaced to avoid the risk of the cable getting caught and tear.

### With wallmounted charger or table charger housing:

Loosen the holder for the charger cable. Remove the battery box from the control box by loosening the locking device on top of the battery box.

**Alt. A.** Place the battery box on the wallmounted charger. Check that the charger is plugged into the power socket (100-240 V AC) and that the yellow lamp on the front of the charger lights (indicates charging).

**Alt. B.** Place the battery box on the charger in the table charger housing. Check that the charger is plugged into the power socket (100-240 V AC) and that the yellow lamp on the front of the charger lights (indicates charging).

**Note! The lift does not operate when the charger cable is plugged into a power socket.**



Old batteries are to be left at the nearest recycling station or given to personnel authorized by Liko/Hill-rom.

## Maximum Load

Different maximum loads may apply to different products on the assembled lift unit: lift, sling bar, sling and any other accessories used. For the assembled lift unit, the maximum load is always the lowest maximum load rating for any of the components. For example, a Golvo which is approved for 200 kg (440 lbs) can be equipped with an accessory which is approved for 300 kg (660 lbs). In this case, the maximum load of 200 kg (440 lbs) applies to the assembled lift unit. Study the markings on the lift and lifting accessory, contact your Liko/Hill-Rom representative if you have any questions.

## Recommended Lifting Accessories

**△ Using lifting accessories other than those approved can entail a risk.**

Generally recommended sling bars and accessories for Golvo mobile lifts are described below.

When changing a sling bar or other lifting accessories, the highest possible lifting height of the lift is affected. Before changing lifting accessories you should always ensure that the lift, after change, can fulfill the desired lifting height in order to manage the lifting situations for which the lift is to be used.

To select suitable slings and other lifting accessories, refer to the brochures “Golvo” and “Lifting accessories”.

For additional guidance in selecting a sling, refer to the instruction guides for the respective sling models.


Here, you will also find guidance for combining Liko’s sling bars with Liko’s slings.

Contact your Liko/Hill-Rom representative or visit [www.liko.com](http://www.liko.com) for advice and information on Liko’s product range.

### SlingBar Mini 220

Max 205 kg / 450 lbs.

Prod. No. 3156005

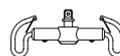

### Universal SlingBar 350

Max 300 kg / 660 lbs.


Prod. No. 3156074



### Universal SlingBar 450

Max 300 kg / 660 lbs.


Prod. No. 3156075

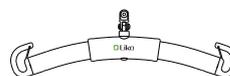

### Universal SlingBar 600

Max 300 kg / 660 lbs.


Prod. No. 3156076

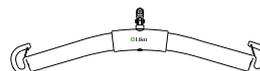

### Universal TwinBar 670

Max 300 kg / 660 lbs.


Prod. No. 3156077

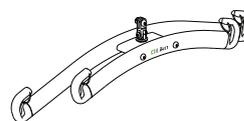

### Sling SideBars 450 incl. storage bag

Max 300 kg / 660 lbs.


Prod. No. 3156079

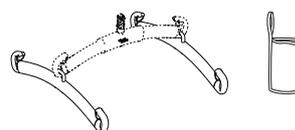

### Sling Cross-bar 450

Max 300 kg / 660 lbs.


Prod. No. 3156021

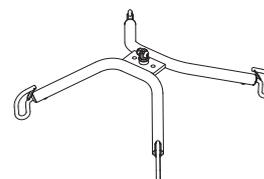

### Sling Cross-bar 670

Max 300 kg / 660 lbs.

Prod. No. 3156018

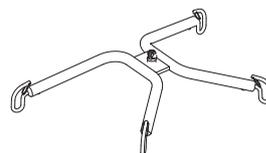

### SlingBar Cover Paddy 30

Prod. No. 3607001

(fits Universal SlingBar 350, 450 and 600 and SlingBar Slim 350)



### Bag for SlingBars

Prod. No. 2001025




### Golvo 7007 LowBase Kit

Prod. No. 20090071

This reconstruction kit enables the lift to be adapted to beds / barrack-beds with a very low ground clearance, 58-110 mm (2.3-4.3 inch.).

Contact Liko/Hill-rom for more information.

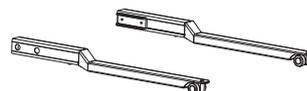

### Quick-release Hook

Liko's Quick-release Hook system enables quick and easy exchange of lifting accessories on Liko's mobile and stationary lifts. Golvo requires Q-link for use with Quick-release Hook.

Quick-release Hook Universal fits Universal SlingBar 350, 450 and 600 (Prod. No. 3156074-3156076). Quick-release Hook TDM fits Sling Cross-bar 450 and 670 (Prod. No. 3156021 and 3156018) and Universal TwinBar 670 (Prod. No. 3156077).

When a sling bar mounted with the Quick-release Hook system is used, the lifting height will be 33 mm (1.3 inch.) shorter than with a permanently mounted sling bar.

See "Guide to Liko's Quick-release Hook System", which can be downloaded from our website, [www.liko.com](http://www.liko.com), or contact Liko/Hill-rom for more information on the advantages and use of the Quick-release Hook system.



**Quick-release Hook Universal**

Prod. No. 3156508



**Quick-release Hook TDM**

Prod. No. 3156502




**Q-link**

Prod. No. 3156509

### Standaid Set

Prod. No. 2001020

For patients with sufficient body stability, the Standaid Set can be used for shorter transfers, for example between a wheelchair and a toilet, or between a bed and a wheelchair. The patient is lifted to a semi-standing position with the help of SafetyVest or the SupportVest, behind the back and under the arms.

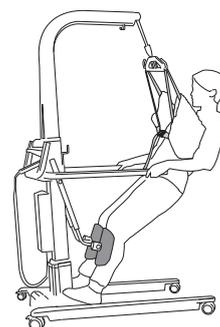

### Stretchers

Most Liko stretcher models can be used in combination with Golvo.

Contact Liko/Hill-rom for more information.



**Liko OctoStretch**  
Prod. No. 3156055



## Scale

In need of weighing patients in combination with Golvo, we recommend LikoScale 350. Max. load 350 kg (770 lbs.).

LikoScale 350 is certified according to the european directive NAWI 90/384 (Non Automatic Weighing Instruments).

Contact Liko/Hill-rom for more information.




## Support Springs

Elastic springs enable a gentler springing motion, which makes activities such as gait training easier and more natural. Springs are available in three different designs:

Long, max. 70 kg (154 lbs.)/pair	Prod. No. 3166511
Short, max. 70 kg (154 lbs.)/pair	Prod. No. 3166512
Short, max. 100 kg (220 lbs.)/pair	Prod. No. 3156513.


For more information, see instruction guide for Liko MasterVest, mod. 60, 64, or Liko Lift Pants, mod. 92.

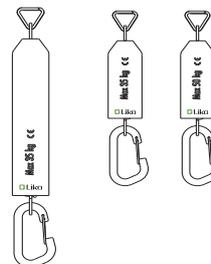

## Leg Protector

Leg Protector Set Golvo 7000, grey  
Leg Protector Set Golvo 7007, grey

Prod. No. 2006011G  
Prod. No. 2006012G

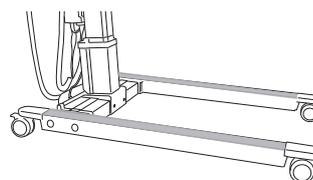

## Extra Battery Box


Prod. No. 2006106



## Charger for Extra Battery

Prod. No. 2004106


for wall mounting or for use with Table Charger Housing

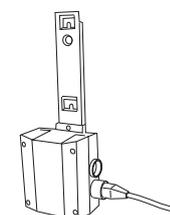

## Table Charger Housing excl. battery box and charger

Prod. No. 2107103

a table charger housing for the charger when you do not wish to mount the charger on the wall.

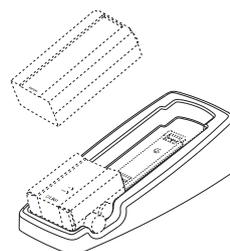

# Simple Troubleshooting

**The lift does not work up/down.  
Base-width adjustment does not work.**

1. Check that the emergency stop button is not pushed in.
2. Check that the cables to the control box are correctly connected.
3. Check that the charger cable is not connected to the power socket.
4. Check that the battery is charged.
5. Check that the contact plates of the battery are not defective or broken off.
6. *If the lift still does not work satisfactory contact Liko/Hill-rom.*

**Battery charging does not work.**

1. Check that the emergency stop button is not pushed in.
2. Check to ensure that the power socket is power-supplied.
3. Check that the charger cable is correctly connected.
4. Check that the contact plates of the battery are not defective or broken off.
5. *If the lift still does not work satisfactory contact Liko/Hill-rom.*

**The lift stops in the elevated position.**

1. Check that the emergency stop button is not pushed in.
2. Use the electrical emergency lowering to safely lower the patient.
3. Use the mechanical emergency lowering to safely lower the patient.
4. Check that the battery is charged.
5. *If the lift still does not work satisfactory contact Liko/Hill-rom.*

**The lift does not reach its maximum lifting height.**

1. Check that the correct lifting range has been set.
2. *If the lift still does not work satisfactory contact Liko/Hill-rom.*

**If you hear unusual sounds or discover wear and tear on the strap.**

*Contact Liko/Hill-rom.*

# Care and Maintenance

## Care and inspection

For safe and troublefree operation, a few routine procedures should be performed every day the lift is used.

- Visually inspect the lift and check for external damage or wear
- Check the sling bar connector
- Check the lift strap for wear and make sure it is not twisted
- Check that the latches work properly
- Test the operation of raising and lowering and the base-width adjustment function
- Check that the correct lifting range has been set and that the emergency lowering works properly
- Charge the battery every day the lift is being used, and check the charger function

When necessary, clean the lift with a moist cloth, using warm water or disinfectant and check that the wheels are free from dirt. **NOTE! Do not use cleaning agents that contain phenol or chlorine, since these can damage aluminium and polyamide material.**

**△ The lift should not be exposed to running water.**

## Service

A periodic inspection of the lift should be carried out at least once a year.

**△ Periodic inspection, repair and maintenance may be performed only in accordance with the Liko service manual by personnel authorized by Liko and using original Liko spare parts.**

## Service Agreement

Liko offers the opportunity to enter into service contracts for the maintenance and regular inspection of your Liko product.

## Expected Life Time

The product has an expected life time of 10 years when correctly handled, serviced and periodically inspected in accordance with Liko's instructions.

## Transport and Storage

During transportation, or when the lift is not to be used for a long time, the emergency stop should be engaged. The environment where the lift is transported and stored should have a temperature of 10 to 40 °C (50–104 °F) and a relative humidity of 30 to 75 %. The air pressure should be 700–1060 hPa.

## Recycling

For instructions on how your Liko product should be recycled, please visit our website [www.liko.com](http://www.liko.com).

## Product changes

Liko's products are constantly being updated and refined. Liko reserves the right to change aspects of the products without prior notice. Contact your local Liko/Hill-rom representative for updated information and advice.

## Design and Quality by Liko in Sweden

*Liko is quality certified according to ISO 9001 and its equivalence for the medical device industry, ISO 13485. Liko is also certified according to environmental standard ISO 14001.*



A  Company

[www.liko.com](http://www.liko.com)

### Manufacturer:

Liko AB  
Nedre vägen 100  
SE-975 92 Luleå  
Sweden  
[info@liko.se](mailto:info@liko.se)